

Treat yourself better™

1

DRENCHING  
RAINFALL  
SETTING

**OptiFLOW**

Maximizes water  
force for the  
ultimate shower.



Waterpik® brand showerheads have advanced OptiFLOW® technology to maximize your shower experience. OptiFLOW® is designed to increase water force up to 30% by optimizing water flow, so you feel refreshed and invigorated.



DRENCHING RAINFALL



**DOWNPOUR  
SHOWERHEAD**

Creates a drenching rainfall  
experience from 36  
spray channels.

**ADJUSTABLE  
SWING ARM**

Allows you to  
position head for  
desired water flow.



**FULL-BODY COVERAGE**

Transform your shower into a luxurious retreat. Soothing and relaxing, the Waterpik® brand RainFall showerhead makes every shower a natural, spa-like experience.


**NO PIPE TAPE  
NEEDED**



**DO NOT INSTALL BY  
USING ARM TO TIGHTEN  
ONTO SHOWER PIPE**

#### INSTALLATION INSTRUCTIONS

- Do not use pipe tape.
- Straighten adjustable bar. Tighten knob.
- Attach showerhead to pipe by rotating hex nut clockwise onto pipe.
- Adjust showerhead arm to desired position by loosening knob. Tighten to lock into place.
- To improve shower performance with low household water pressure, remove flow restrictor from shower arm using needle-nose pliers and replace with washer (supplied).
- You must use either the flow restrictor or washer (as shown below), but not both.

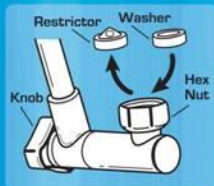

#### CLEANING INSTRUCTIONS

- Polish with moist, soft cloth.
- For heavier cleaning, submerge in household vinegar.
- If other cleansers contact product, rinse immediately.

#### LIMITED LIFETIME WARRANTY

Water Pik, Inc. warrants to the original purchaser of this product that it is free from defects in material and workmanship for as long as the original purchaser owns this product. Water Pik will at our election, replace any part of the product, which in our opinion is defective, provided the product has not been abused, misused, altered or damaged after purchase. (This includes damage due to use of tools or harsh chemicals.) In the event an item has been discontinued we will replace with what we deem to be the closest product. Water Pik, Inc. is not responsible for labor charges, installation, or other consequential costs. The responsibility of Water Pik, Inc. shall not exceed the original purchase price of the product.

This warranty gives you specific legal rights. You may also have other rights that vary where you reside. Save your receipt as proof of purchase is required for warranty action.

Water Pik, Inc.  
1730 East Prospect Road  
Fort Collins, CO 80553-0001  
[www.waterpik.com](http://www.waterpik.com)

© 2008 Water Pik, Inc.

Made in China

Waterpik® (stylized) is a trademark of Water Pik, Inc. registered in Canada, the EU, Mexico, Switzerland, and the United States.

Treat Yourself Better™ is a trademark of Water Pik, Inc.

Optiflow® is a trademark of Water Pik, Inc. registered in the United States.

Actual product may vary from that pictured.